
DATA SHEET



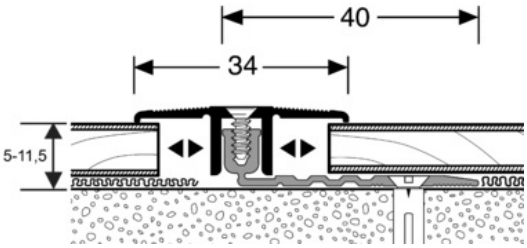

> MAINTENANCE

For daily cleaning, use standard detergents. In case you want to use a sodium, ammoniac or acid based cleaner, carry first out a preliminary test.

DESCRIPTION

Drilled aluminium profile
to make a transition between 2 floor coverings of the same level
Drilled - countersunk: to be screwed
14 holes, first and last one at 83 mm
Holes are drilled, countersunk and deburred
Supplied with screws and plugs

USE

For overlapping a floor covering or a parquet or concrete floor.
Indoor use

REFERENCE

Ref : 3413

MATERIAL

REACH compliant

FITTING MODE

Position the profile base, leaving an expansion gap. Locate the holes and drill into the concrete. Place the plugs, screw the base. Screw the cover onto the base to ensure a good connection.

The information contained in this document is provided for information purposes. Romus cannot be held liable for this information. The user or specifier will check the compatibility of the product technical data with the actual situation. Romus reserves the right to modify all or part of this document without prior notice.

Architect :
Project :
Email :
Tel :

Distributor : Tel : Email :