


## DATA SHEET

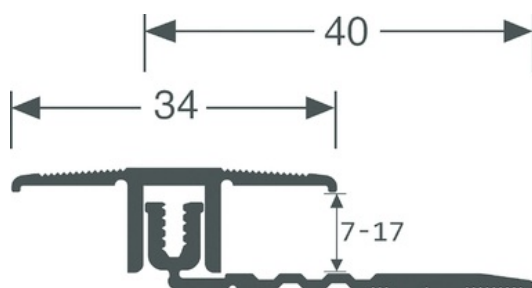

### DESCRIPTION

Drilled aluminium profile  
to make a transition between 2 floor coverings of the same level  
Drilled - countersunk: to be screwed  
14 holes, first and last one at 83 mm  
Holes are drilled, countersunk and deburred  
Supplied with screws and plugs

### USE

For overlapping a floor covering or a parquet or concrete floor.  
Indoor use

### REFERENCE

Ref : 1281

### MATERIAL

REACH compliant

### FITTING MODE

Position the profile base, leaving an expansion gap. Locate the holes and drill into the concrete. Place the plugs, screw the base. Screw the cover onto the base to ensure a good connection.

### > MAINTENANCE

For daily cleaning, use standard detergents. In case you want to use a sodium, ammoniac or acid based cleaner, carry first out a preliminary test.

The information contained in this document is provided for information purposes. Romus cannot be held liable for this information. The user or specifier will check the compatibility of the product technical data with the actual situation. Romus reserves the right to modify all or part of this document without prior notice.

Architect :

Project :

Email :

Tel :

Distributor :

Tel :

Email :